

Turning on/off the Controller



1. Turn On Controller

Press 



2. Remove the control lock

Press 

*Always when you are not using the controller that is turned on, lock it – this will prevent unexpected movements of the robot.
To make sure that the controller is locked, check that the light is blue.*




3. Start controlling the robot




4. To turn off the controller, press and hold the PS button for 10 seconds.

Press 

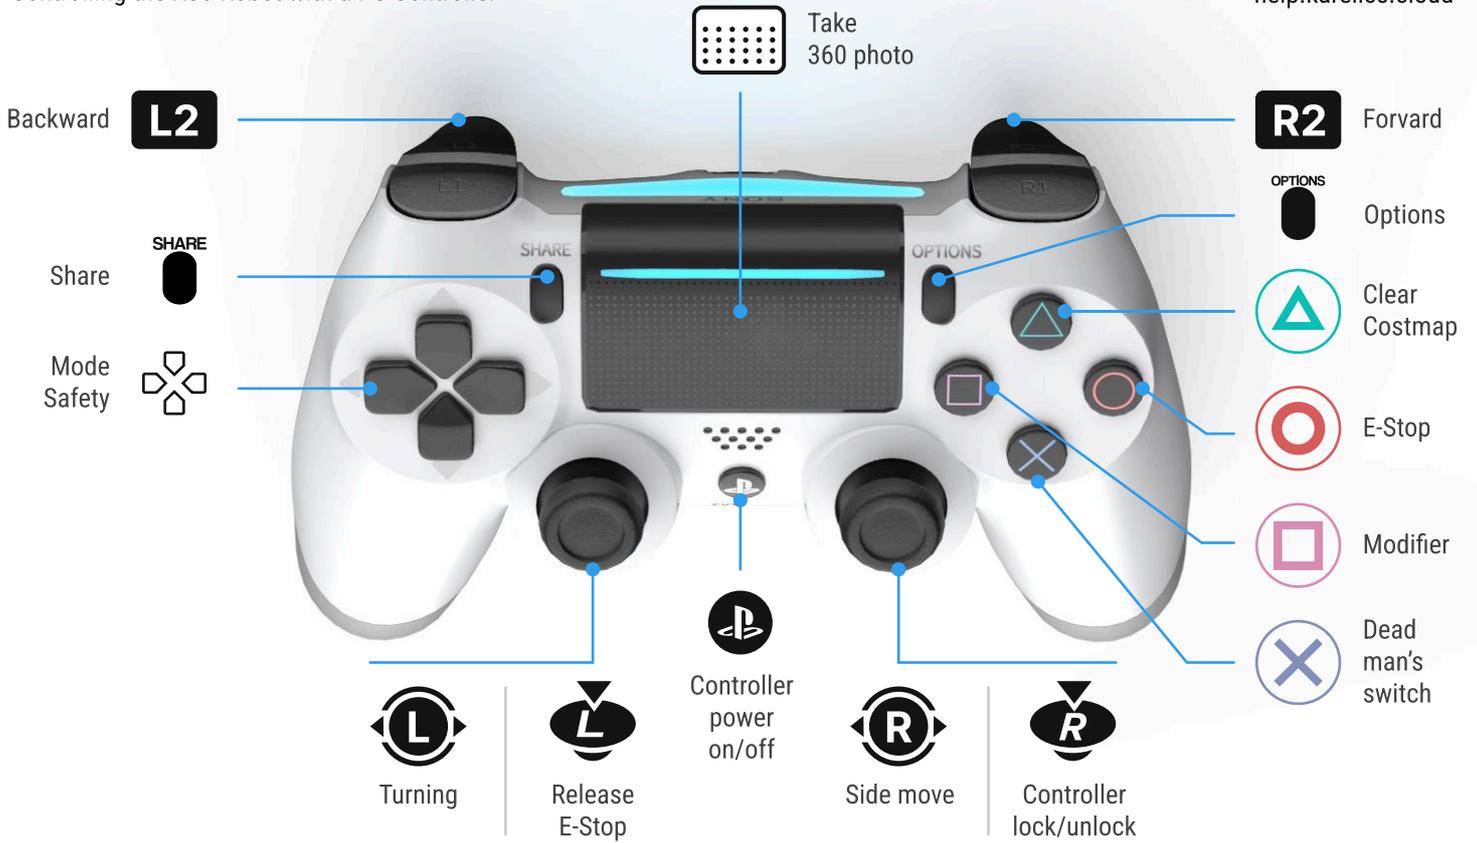

Mode

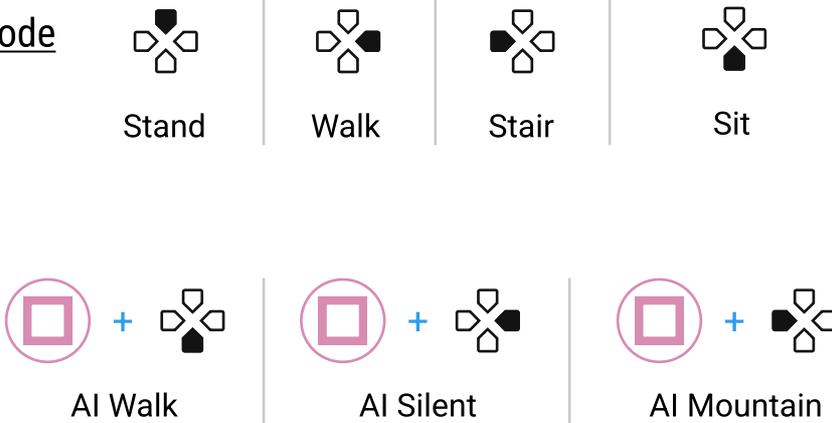

Active Safety




Movements



Emergency STOP




Controls

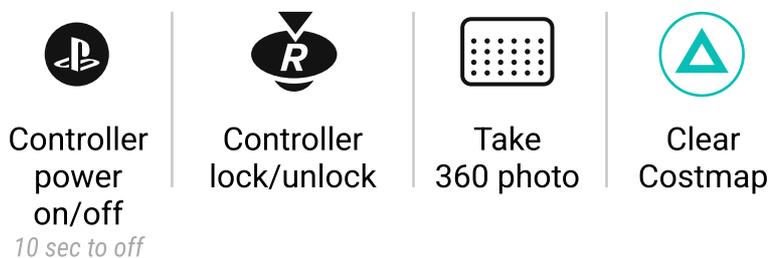

Assistance in movement

Docking

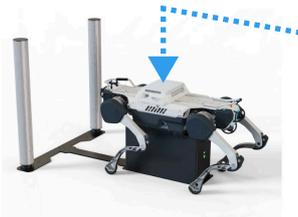

Undocking



Solid Ground



Grid Ground



Multi Frame

Usually takes me a couple of tries for this to succeed



No raiser stairs

