










Mode

			
Stand	Walk	Stair	Sit



		
AI Walk	AI Silent	AI Mountain

Active Safety


 + 

Assisted Obstacle Avoidance on/off


Movements

L2	R2		
Backward	Forward	Turning	Side move

Controls

			
Controller power on/off 10 sec to off	Controller lock/unlock	Take 360 photo	Clear Costmap

Emergency STOP

	
E-Stop	Navigation dead man's switch


Release E-Stop

Turning on/off the Controller



1. Turn On Controller

Press 



2. Remove the control lock

Press 

*Always when you are not using the controller that is turned on, lock it – this will prevent unexpected movements of the robot.
To make sure that the controller is locked, check that the **light is blue**.*



3. Start controlling the robot



4. To **turn off** the controller, press and hold the PS button for 10 seconds.

Press 